


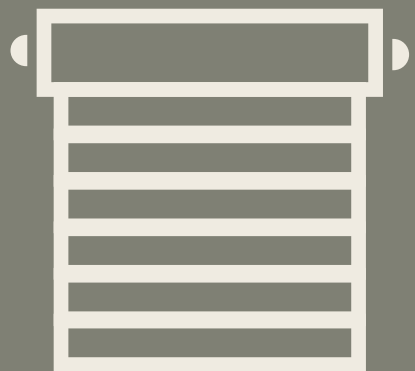


User Manual Blinds

Manual de Uso Persianas eléctricas

EN

The blinds are operated using electric buttons to raise or lower them.

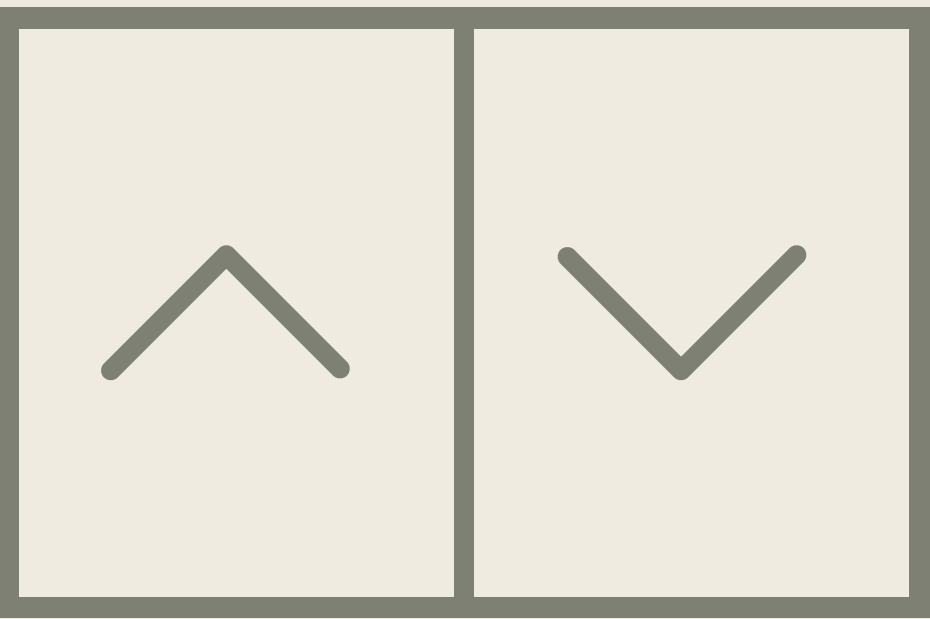


To raise the blinds, press the up button (^) until they reach the desired height. If you press the up button again, the blinds will stop. If you don't press it again, the blinds will continue to rise fully.

To lower the blinds, you need to release (unlock) the up button (^) and then press the down arrow button (v) to begin closing them.

ESP

Las persianas tienen unos botones eléctricos para poder subirlas o bajarlas.

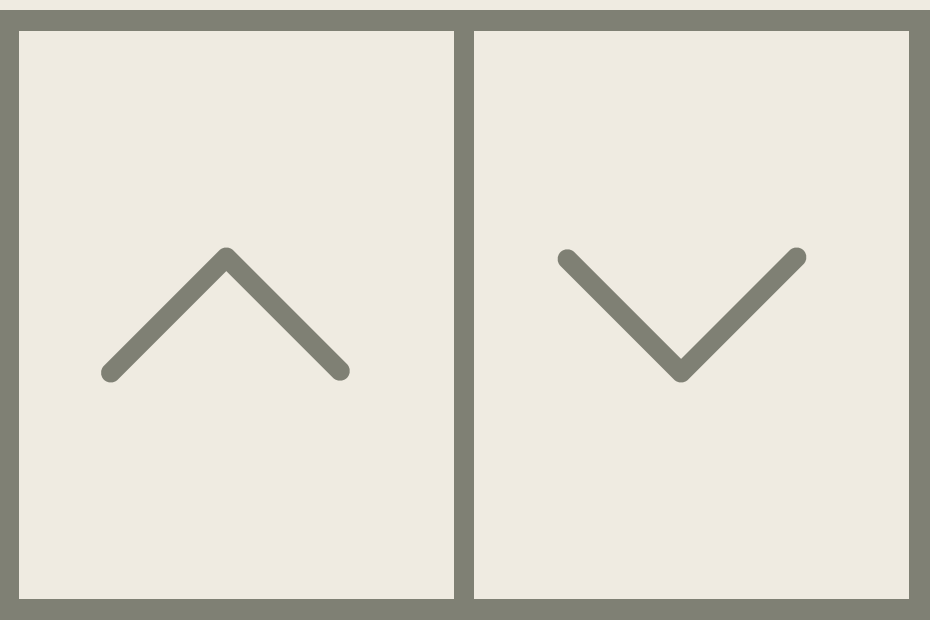

Para subir las persianas hay que presionar el botón con la flecha hacia arriba ^ hasta alcanzar la altura deseada, si volvemos presionar este botoñon de subir la persiana parará, en caso de no presionarlo la persianan subirá por completo. Para poder bajar la persiana, hay que bloquear el botón de ^ y presionar el botón de Bajar v para que comience a cerrarse.